



Consult Safety Instructions Before Use.

Get Started

Welcome to Flip MinoHD™

- 1 Press power button to turn on. Video camera setup appears automatically the first time you power on.

Note: The battery pack is shipped partially charged. For best results, fully charge before use. Simply follow steps in the Recharge Battery section.

Set Language

- Use **+** and **-** to select your language.

Set Date

- Use **+** and **-** to adjust current setting.
- Use **<** and **>** to select month/day/year.

Set Time

- Use **+** and **-** to adjust current setting.
- Use **<** and **>** to select hour/minute/AM/PM.

Turn Off Tones

- Use **<** and **>** to turn the tones on and off.

Turn Off Recording Light

- Use **<** and **>** to turn the recording light on and off.

To Return to Video Camera Setup Later

Starting with the video camera OFF:

- 1 Press power button to turn on.
- 2 When MinoHD logo appears, press and hold record button until SET LANGUAGE appears.



Record and Play

Touch-Sensitive Buttons

Gently touch lighted icons with your finger to activate the controls on the back panel.

Record Videos

- 1 Press **●** to start/stop recording.
- 2 Press and hold **+** and **-** to zoom in/out during recording.

Play Videos

- 1 Press **▶** to play/pause.
- 2 Press and hold **+** and **-** to increase/decrease volume.
- 3 Press **<** and **>** to view previous/next video. *Note: Press and hold **<** and **>** during playback to rewind/fast-forward.*

Delete Videos

- 1 Press **🗑** button. Select YES to confirm. *Note: Delete button is locked the first time you power on. To unlock, press and hold delete button.*



Connect to Computer

- 1 Slide USB latch down. USB arm flips up automatically.
- 2 Connect USB arm to computer's USB port.
- 3 Your video camera will begin recharging and you can install the pre-loaded FlipShare™ software on your computer.

Recharge Battery

- 1 Slide USB latch down. USB arm flips up automatically.
 - 2 Connect USB arm to computer's USB port.
 - 3 Recording light turns on to indicate charging. When charged, the recording light turns off.
- The video camera uses a sealed, rechargeable battery.
 - Fully recharging the battery can take up to four hours.
 - The video camera may remain connected to your computer after it is fully charged, but disconnecting it will help preserve the battery's lifespan and performance.
 - The optional Flip Video Power Adapter (available at www.theflip.com/accessories) can charge the battery in about two hours.

Note: Your computer must be powered on for the video camera to charge.



Organize, Create and Share



Pre-loaded FlipShare software makes editing and sharing your videos easy. Just plug in your video camera, open FLIPVIDEO and launch Setup FlipShare (PC) or Start FlipShare (Mac).

FlipShare Features

- Save videos to your computer.
- Organize your videos.
- Capture snapshots from your videos.
- Create custom movies and greeting cards.
- Share videos privately via email, Flip Channels™ or upload directly to:



Visit the FlipShare software HELP section for detailed instructions on all features.

600-0161-100 / 3250-00196

View On HD Television

- 1 Power off video camera and television.
- 2 Connect video camera to television with optional HDMI™ Cable from Flip Video (available at www.theflip.com/accessories).
- 3 Power on video camera and television.
 - Video camera screen will be off when connected to television.
- 4 Switch your television to the appropriate VIDEO input.
 - See television manual for instructions.
- 5 Press play button to start/pause playback.



HDMI

Note: You can use any brand of HDMI Cable that has an HDMI Connector (for the HDTV) on one end and HDMI Mini Connector (for the video camera) on the other end.

Video Camera Features



1	Power Button	Press to turn on/off.
2	Wrist Strap Hook	Attach wrist strap (included in package).
3	HDMI™ Mini Port	Connect HDMI™ cable accessory to your HDTV.
4	Tripod Mount	Attach a tripod or a Flip Video™ accessory.
5	Recording Light	Red light turns on during recording or charging. Built-in stereo microphone is also located here.
6	USB Arm	Connect to a PC or Mac USB port.
7	USB Latch	Slide down to release USB arm.
8	Screen	Recording viewfinder/playback screen.
9	Recording Controls	Touch buttons to record and preview videos.
	Record Button	● Touch to start/stop recording. <i>During Power On:</i> Hold to return to video camera setup.
	Play Button	▶ Touch to play/pause playback. Touch and hold to play all videos.
	Delete Button	🗑 Touch to delete. Touch and hold to lock/unlock the delete button.
	Up/Down Buttons	+/- <i>While recording:</i> touch and hold to zoom in/out. <i>During playback:</i> touch and hold to increase/decrease volume.
	Left/Right Buttons	<> <i>While paused:</i> touch to skip to previous/next video. <i>During playback:</i> touch and hold to rewind/fast-forward.

Extend the fun with Flip Video Accessories. Learn more at www.theflip.com/accessories.

Included In This Box:

Flip MinoHD™ Video Camera, Wrist Strap, Soft Case, User Guide, Safety Instructions and Warranty Information

Flip Video Support:

Go to www.theflip.com/support

Declaration of Conformity:

Responsible Party:
Cisco Consumer Products LLC, 185 Berry Street,
Suite 6900, San Francisco, CA 94107 USA

FCC Compliance Statement
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio and TV Interference

This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of FCC rules. These specifications are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

CAUTION: Changes or modifications to this device not authorized by Cisco Consumer Products LLC may void the user's authority to operate this device.

CANADIAN ICES-003 STATEMENT:
This Class B digital apparatus complies with Canadian ICES-003.

Cisco, the Cisco logo, Flip MinoHD, FlipShare, Flip Video, and the Flip Video logo are trademarks or registered trademarks of Cisco and/or its affiliates in the United States and certain other countries. All other trademarks mentioned in this document or website are the property of their respective owners. For more information, please visit www.theflip.com.

© 2009-2010 Cisco and/or its affiliates. All rights reserved.

Facebook, Twitter, and YouTube are trademarks of their respective owners. Mac is a registered trademark of Apple Inc.

The HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.